





Instructions for Unfolding



Remove from bag, Carefully allowing It to uncoil.

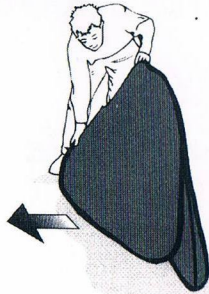

Spread it As per the shape.

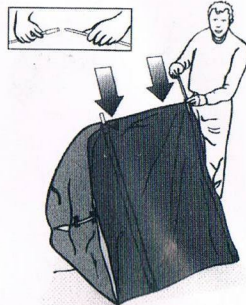

For extra stability Insert the connecting pipes In the specified channel.


Instructions for Folding




Push the side against Each other to form Flat shape.




Turn the Steam Life Cabin onto a corner and tuck In the loose floor material. It is important to hold the outside Edges of the tent as shown.

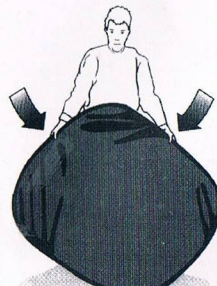

As you push down, Bring your hands together, Twisting them inwards At the same time.

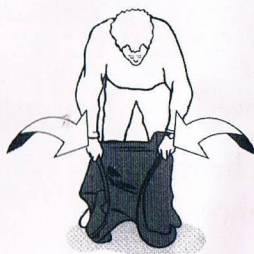


Cross your hands in front of you, allowing the lower coil to spring Up under your hands. Continue crossing your hands and place The flat, coiled Steam Life Cabin on the ground in front of you. Store in bag when no in use.

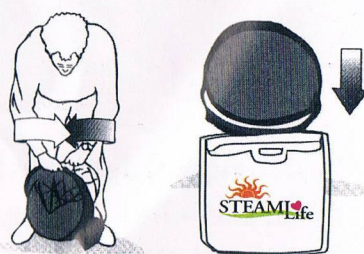

Directions for use

1. Assemble the Steam Life Cabin according to the diagrams attached. Connect steam pipe to the steamer pot.

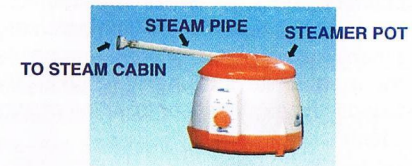

2. Fill the Steamer Pot compartment with tap water up to the indicated maximum water level. You could add a few drops of essential oils at this stage.
3. Connect the Steamer Pot 's main plug into a convenient socket. Set the timer to 15 minutes or as comfortable to you.
4. The Steamer Pot will start producing sufficient steam for a steam bath after about 5-10 minutes. Most people choose to take a steam bath for around 10-15 minutes.
5. Place a suitable plastic chair inside the Steam Life Cabin. Sit down and enjoy your steam bath.
6. After use always wipe the inside of the cabin with a dry cloth. Do not put away damp.

CAUTION :

- ❖ Do not immerse the Steamer Pot.
- ❖ If you have any concerns about your health, please consult a doctor before using Steam Life.
- ❖ This is not a Medical Device.

Specifications :

Commodity	: Portable Steam bath.
Voltage	: AC220/230 V (50/60Hz)
Power	: 750 Watts. (Approx)
Capacity of Water	: 1.5 L. max.
Time-setting	: 60 min. max.

